

# FITTING INSTRUCTIONS



# ZIP CLIP™

## THE FASTER REPLACEMENT BELT



### PUSH-IN PIN



Connecting Pin & 1 spare included with two retaining collars

Pulling-on Part



- 1** When your ZIP CLIP™ replacement belt has been mounted onto the conveyor, using the supplied pulling-on part, lay the pre-prepared (mechanically fastened) ZIP CLIP™ belt ends together, ensuring that they connect correctly

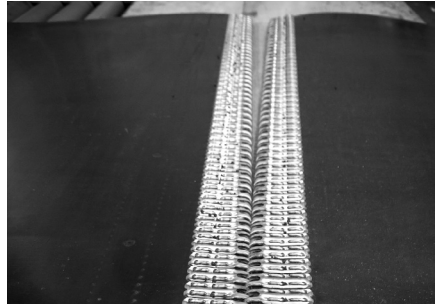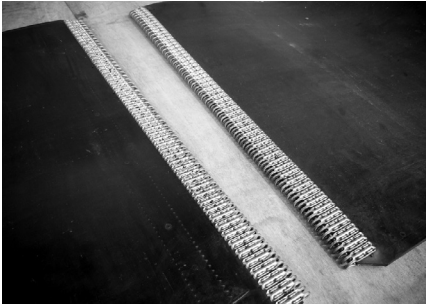

## NOTE!

Check that the mechanically fastened ZIP CLIP™ belt ends are brought together in the correct position (like a ZIP) - with belt top cover to the top - so that the belt is straight, with both sides in line

- 2** Insert the tapered end of the PIN into the joint and push it right through until fully inserted. The PIN should protrude beyond the joint equally at both sides, as shown below. Finally fit two the retaining collars provided to each end of the pin using the appropriate allen key. This ensures the pin will not become loose over time.

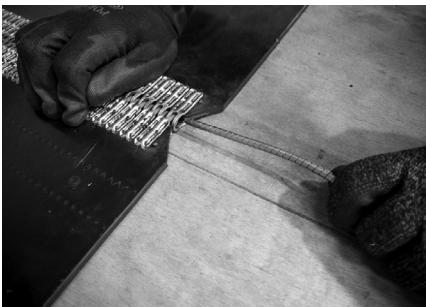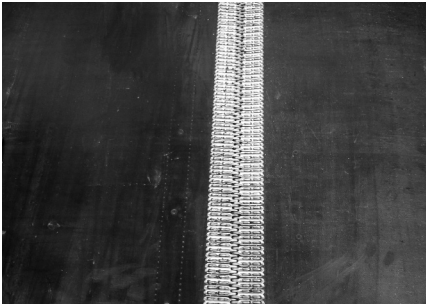

- 3** Once this PIN insertion operation is complete and the ZIP CLIP™ belt has been properly tensioned at the tail pulley with equal adjustment, the maximum load can be immediately applied



ZIP CLIP™ connecting pins are removable and reusable, which makes it the ideal temporary replacement belt system to get your conveyor up and running again in a breakdown situation. Don't forget to keep the retaining collar parts and allen keys provided.